


Medium Cane/Walking Stick Assembly

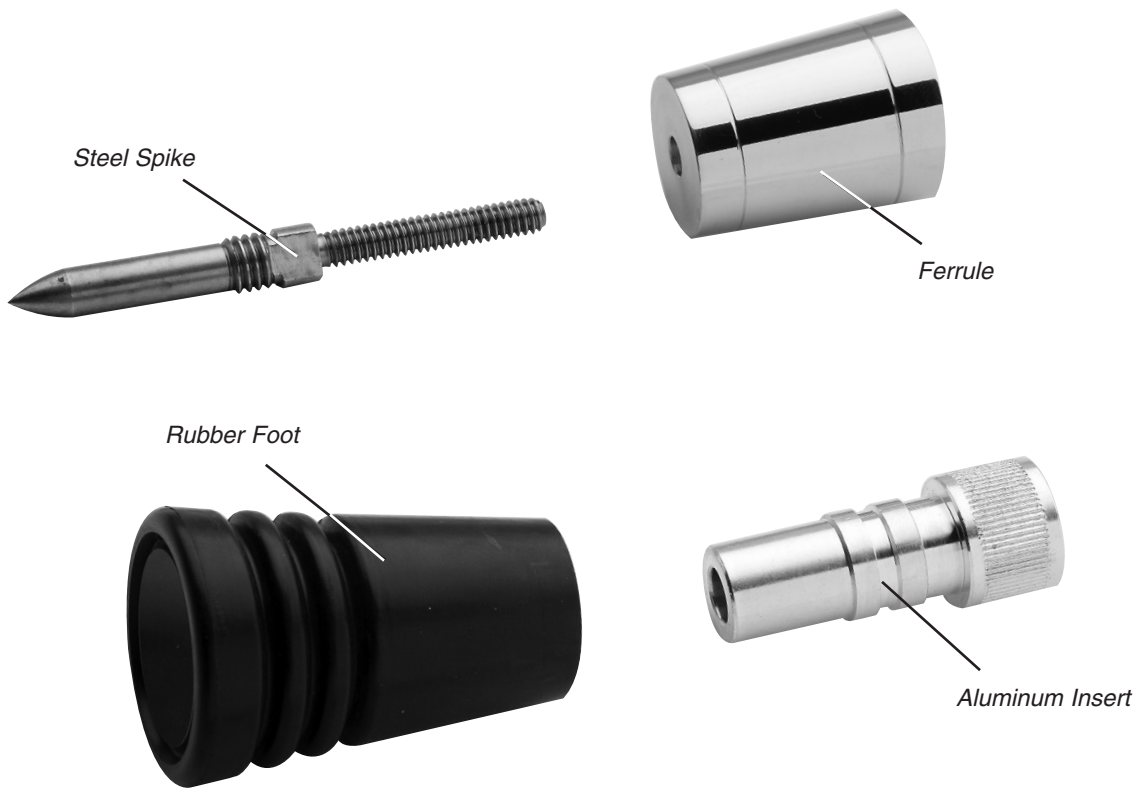

Assembly

Read the assembly instructions completely before assembly.

1. Make sure the end of the cane/walking stick has the same profile as the Ferrule: approximately 1" diameter at its top and 5/8" at its bottom.
2. Remove the Steel Spike from the Aluminum Insert.
3. Push the Aluminum Insert into the Rubber Foot so the threaded end is flush with the tapered end of the Rubber Foot.
4. Fit the Brass Ferrule to the end of the cane/walking stick. If the fit is loose, CA (cyanoacrylate) glue or epoxy may be used to secure the Ferrule.
5. If your cane/walking stick is made from softwood, drill a 3/16" hole into the end to a depth that matches the threaded end of the Steel Spike. If your cane/walking stick is made from hardwood, drill a 7/32" hole instead.
6. Using the Rubber Foot as a handle, start threading the Steel Spike into the wood. A small amount of epoxy in the hole will ensure the Steel Spike remains tight.
7. Remove the Rubber Foot and finish tightening with a wrench. Tighten until the Steel Spike is firmly against the Ferrule.
Caution: Do **NOT** overtighten.

Reordering Information	Stock #
Medium Cane/Walking Stick Kit.....	29510
3/16" Drill Bit.....	24038
7/32" Drill Bit.....	25618

WARNING: This product contains one or more chemicals, including lead, that are known to the State of California to cause cancer and birth defects or other reproductive harm.
Wash hands after handling.

© 2015 Rockler Woodworking and Hardware
Distributed by Rockler Companies Inc.



Made in China

**Medium Cane/
Walking Stick
Assembly
Instructions**

ROCKLER
WOODWORKING AND HARDWARE
Create with Confidence®

ROCKLER
WOODWORKING AND HARDWARE
Create with Confidence®

**Medium
Cane/Walking
Stick
Assembly
Instructions**